Electrolux

Upright Vacuum Cleaner Owner's Guide

Household Type

Z5740 Series

[redacted]

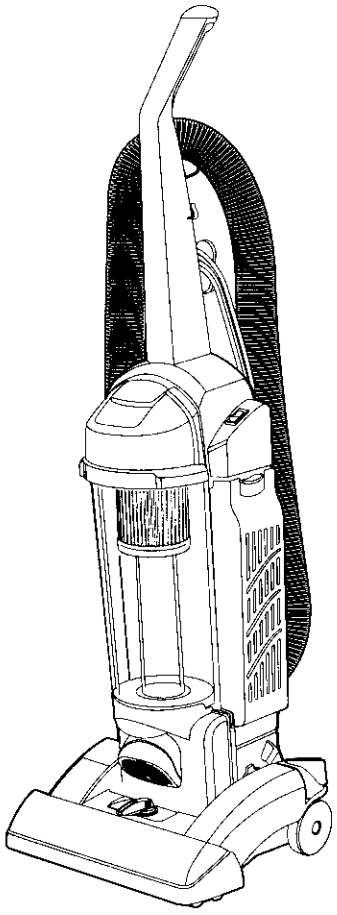

IMPORTANT

For any advice on your cleaner and to order dust bags, filters and accessories, please telephone Customer Care 08706 055055

2- 4 [redacted]

4 [redacted]

5- 6 [redacted]

7- 8 [redacted]

9 [redacted]

[redacted]

10 Dust Cup

11 Dust Cup Filter

12 Side Door Filters

[redacted]

13 Brush Roll Brush Roll Belt

[redacted]

14 Clear Hose

15 Guide

www.electrolux.co.uk

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER.

WARNING

To reduce the risk of fire, electric shock, or injury:

- Do not use outdoors or on wet surfaces.
- **Do not leave vacuum cleaner whilst plugged in**. Turn off the switch and unplug the electrical cord when not in use and before servicing.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If vacuum cleaner is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service centre before using.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.
- Do not use extension cords or outlets with inadequate current carrying capacity.
- Turn off all controls before unplugging.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- This vacuum cleaner creates suction and contains a revolving brush roll. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not place cleaner on furniture or stairs as the brush roll may cause damage. Place cleaner on floor with the handle in storage position while using attachments.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without the dust cup or filter(s) in place.
- Belt pulleys can become hot during normal use. To prevent burns, avoid touching the belt pulley when servicing the drive belt.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids such as gasoline, or use in areas where they may be present.
- Store your cleaner indoors in a cool, dry area.
- Keep your work area well lighted.
- Unplug electrical appliances before vacuuming them.

SAVE THESE INSTRUCTIONS

BEFORE YOU START

CHECK THE VOLTAGE

Before connecting the cleaner to an electrical supply, ensure that the voltage shown on the rating plate located beneath the cleaner is of the correct voltage for your electricity supply. If it is not, do not use the cleaner but refer back to your dealer.

CONNECTING TO YOUR ELECTRICITY SUPPLY

Permanently connected to the cleaner is a mains supply (2-core) cable fitted with a non-rewirable plug incorporating a 13A fuse.
In the event of the fuse requiring replacement the fuse cover should be removed using a small screwdriver. The old fuse **MUST** be replaced by a 13A ASTA approved BS1362 fuse or a BSI approved fuse. The cover must be replaced before the plug is used again. In the event of loss of the fuse cover, replacements can be obtained from your Electrolux Retailers and must be of the same colour as indicated by the coloured insert on the base of the plug.
If difficulty is experienced in obtaining a replacement, contact Electrolux Customer Services on 08706 055055.
In no circumstances must the plug be used without a correct fuse cover fitted.
If the plug that is fitted to your appliance is not suitable for your socket outlet, it must be cut off and the appropriate plug fitted.
Remove the fuse from the cut off plug.
The cut off plug should then be disposed of to prevent the hazard of shocks in case it should be plugged into a 13 amp socket in another part of your home.
The wires in the mains cable of this appliance are coloured in accordance with the following code: **Blue: Neutral. Brown: Live.**
As the colours of the wires in the mains cable of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:
The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.
The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.
If using a three-pin plug, do not make any connection to the terminal marked with the letter E or by the earth symbol or coloured green or green-and-yellow. This cleaner is double insulated and no earth connection is necessary.
It is in your interest to ensure that the plug is correctly attached to the mains cable. In case of doubt, consult a qualified electrician, as Electrolux cannot regard the repair of faults on the plug connection as a service that can be given free of charge under the terms of the guarantee.

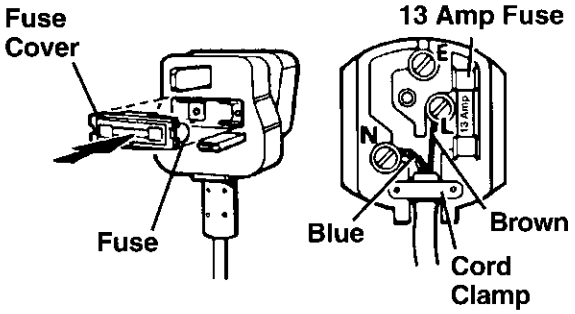

WARNING

The brush in the cleaning head rotates at high speed and can cause damage to the mains supply cable if the cleaner passes over it during cleaning operations.
Care should be taken to ensure that this does not happen. If the cleaning head has accidentally passed over the mains supply cable the following action should be taken:

1. Switch off and remove the plug from the socket outlet.
2. Examine the mains supply cable for damage (only after removing the plug from the socket outlet).
3. If there is any sign of damage to the supply cable it MUST be renewed. The repair MUST be carried out by an Electrolux Service Agent or a similar qualified person.
4. **NEVER** use the machine with a damaged mains supply cable.

Proprietary carpet conditioning and air freshening materials
After using proprietary carpet conditioning powders, it is recommended that the filters be changed. Some of these preparations contain substances which if left in the vacuum cleaner for extended periods could damage the plastic mouldings which form the structure of the cleaner.
Many air fresheners, household deodorants, sprays and polishes contain a highly flammable gas propellant.
Because of this, it is particularly important that these products are used strictly in accordance with the relevant manufacturer's instructions.
It is essential that none of the above products are sprayed directly into the vacuum cleaner or any of its filters, hose assembly, dustbag chamber or dust cup.

Thermal Cut Off

This vacuum cleaner has a special thermostat that protects the cleaner in case of motor overheating. If the cleaner suddenly shuts down, push the switch pedal once and unplug the cleaner. Check the cleaner for a possible source of overheating such as a full dust cup, a blocked hose or clogged filter. If these conditions are found, fix them and wait at least 30 minutes before attempting to use the cleaner. After the 30 minute period, plug the cleaner back in and turn on the switch. If the cleaner still does not run, please call Electrolux on 08706 055055.

SERVICE

Should you require service on your Electrolux cleaner, please telephone Electrolux Customer Services on 08706 055055. Before requesting service, please check whether your problem is covered under Service Checklist (see below).

New filter pads,brush rollers and drive belts can be obtained from Electrolux Retailers. If difficulty is experienced in obtaining spares, please contact Electrolux on 08706 055055.

SERVICE CHECKLIST

- **If** your cleaner will not operate, check the plug connection, plug fuse and mains fuse.
- **Never allow** the dust cup to become so full that it impedes the air-flow, thus reducing the cleaning efficiency of the machine. The character of household dust and its effect on the air-flow through the machine may vary considerably. Fluffy dust allows air to pass through readily whereas fine powdery dust or proprietary cleaning powders, pack tightly in the dust cup, offering greater resistance to air-flow and will reduce cleaning efficiency if the cup becomes overloaded.
- **Always store** your cleaner and spare dust filters in a dry place.
- **Renew** the filter pads three or four times a year. This is essential to ensure continued high filtration of dust particles.
- **Sucking up** such items as stockings, clippings of cloth, sizeable pieces of paper, wrappings from cigarette packets or sweets etc., may block the hose. **Electrolux regrets that the clearing of blocked hoses cannot be regarded as service that can be given free of charge, under the guarantee.** Should a blockage occur, first disconnect the cleaner from the electricity supply, refer to section headed "Blockages". If these operations are not successful, contact Electrolux on 08706 055055.
- **Never** pick up hot cinders or lighted cigarette ends.
- **Make certain that your cleaner does not come into contact with water or any other liquid. It is not designed as a wet pick up cleaner, and must never be used on damp carpets or wet floors.**

Important - in the event of the mains supply cable of this vacuum cleaner requiring replacement, we recommend that this be carried out by Electrolux Service Staff.

Spares

New filters, brush rollers and drive belts can be obtained from Authorised Electrolux Dealers and electrical retailers. If difficulty is experienced in obtaining spares please call us on 08706 055055 or visit our website at www.shop.electrolux.co.uk

GUARANTEE

This guarantee is in addition to your statutory and other legal rights.

This product is for household use only.

Electrolux products are carefully designed, manufactured, tested and inspected and, in consequence, we undertake to replace or repair any part found to be defective in materials or workmanship, within one year of delivery to the original purchaser, free of charge. You may be required to take the product to your nearest service provider if the product requires attention during the first year.

There are certain conditions which may invalidate this guarantee:

a. It is dependent upon the appliance being correctly installed and used in accordance with the Company's instructions under normal domestic conditions within the United Kingdom or the Republic of Ireland.

b. Service at all times must be carried out by an Electrolux Service Representative or authorised agent.

c. The guarantee may be invalidated by unauthorised repair or modification of the appliance.

d. You may be charged by Electrolux if you call for an engineer to resolve a problem that we believe is covered in the instruction booklet. (example: blocked/dirty filters)

Electrolux does not accept liability for all defects arising from neglect, misuse or accident. This guarantee excludes such normal wearing parts as drive belts, brushes and filters as the life of these depends upon the amount and nature of use.

Proof of purchase will be required before service under guarantee is provided. Please call 08706 055 055 for assistance.

IMPORTANT:
For future reference we suggest you record the following details here, and keep the receipt with the handbook as proof of purchase.
Purchased from _____
Date purchased _____ Model no _____

Electrolux
101 Oakley Road, LUTON, BEDFORDSHIRE, LU4 9QQ

Features of the Electrolux vacuum cleaner and accessories supplied with it are protected in Great Britain and abroad by Patents or Registered Designs.

This appliance conforms with the requirements of the amended E.E.C. directive No. 89/336/EEC relating to electromagnetic compatibility (EMC) CE.

Electrolux, may introduce modifications to their product from time to time, and consequently the details given in this booklet are subject to alteration without notice.

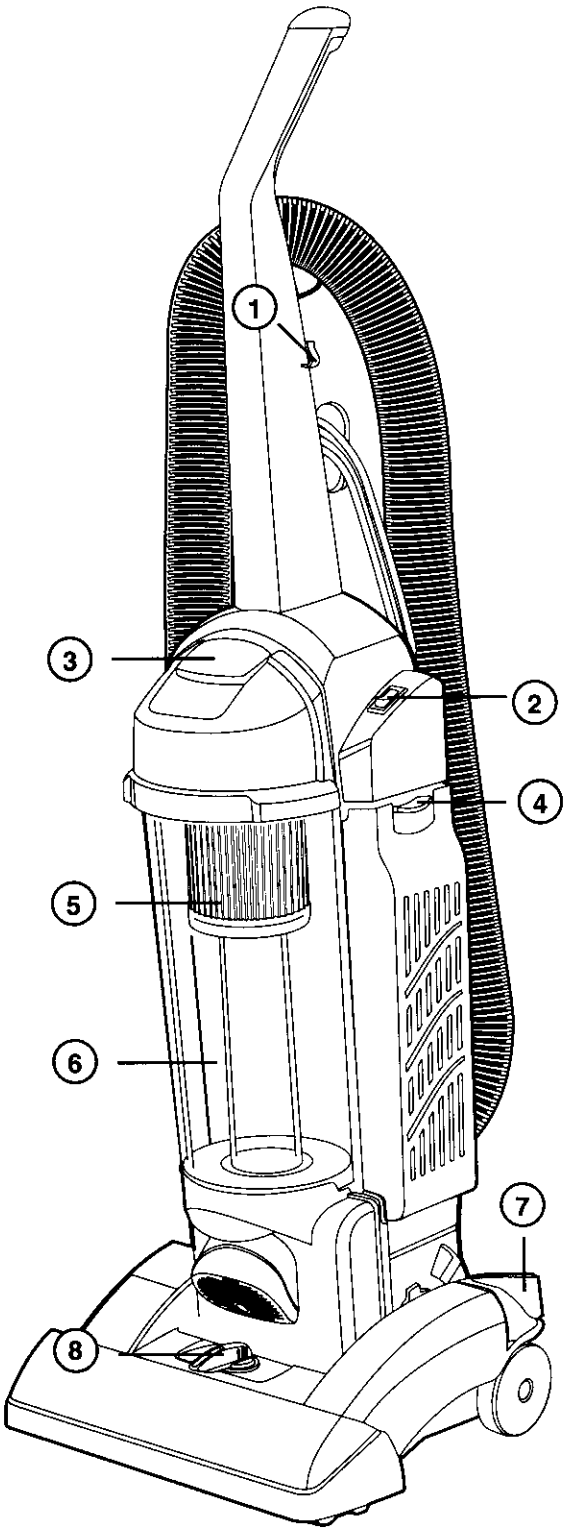

1. **Cord Retainer.** To use, push electrical cord down into cord retainer.

2. **ON/OFF Switch.** International symbol **I** means On, International symbol **O** means Off.

3. **Dust Cup Latch.** Pull up on latch to remove dust cup giving access to the dust cup filter and motor filter.

4. **Filter Door Latch.** Push down on latch and pivot out for access to the filter compartment. Push up on latch to close door.

5. **Dust Cup Filter.** Clean the dust cup filter frequently to maintain good performance.

6. **Dust Cup.** The debris from cleaning is collected in the dust cup.

7. **Handle Release.** Step on handle release to pull handle back to a comfortable operating position.

8. **Cleaner Height Setting.** An adjustment that raises or lowers the cleaner base to match the type of floor surface.

WARNING: Avoid injury. Keep loose clothing, hair, fingers, and all other parts of body away from any moving part (such as the revolving brush). Turn off the switch and unplug the cleaner before changing the cleaner height setting.

WARNING: Keep children away from rotating parts on cleaner.

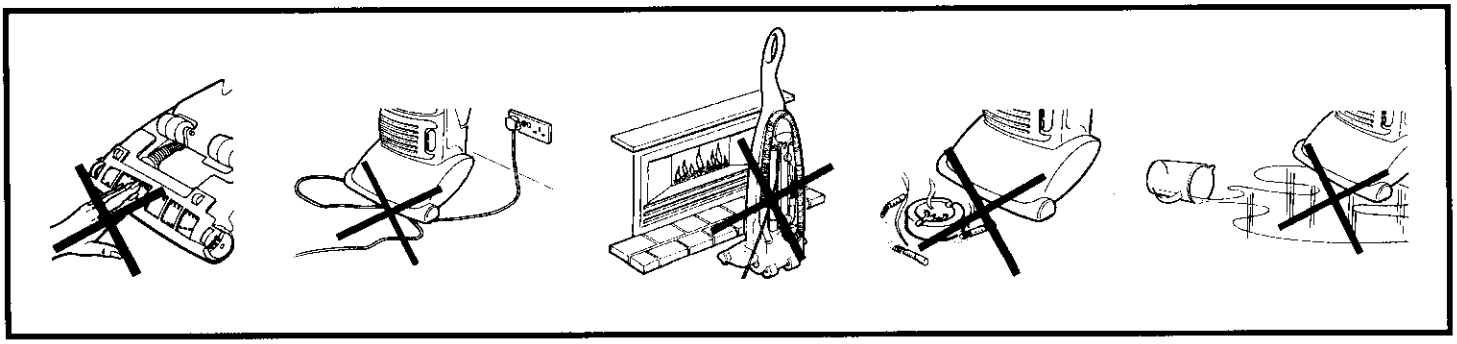

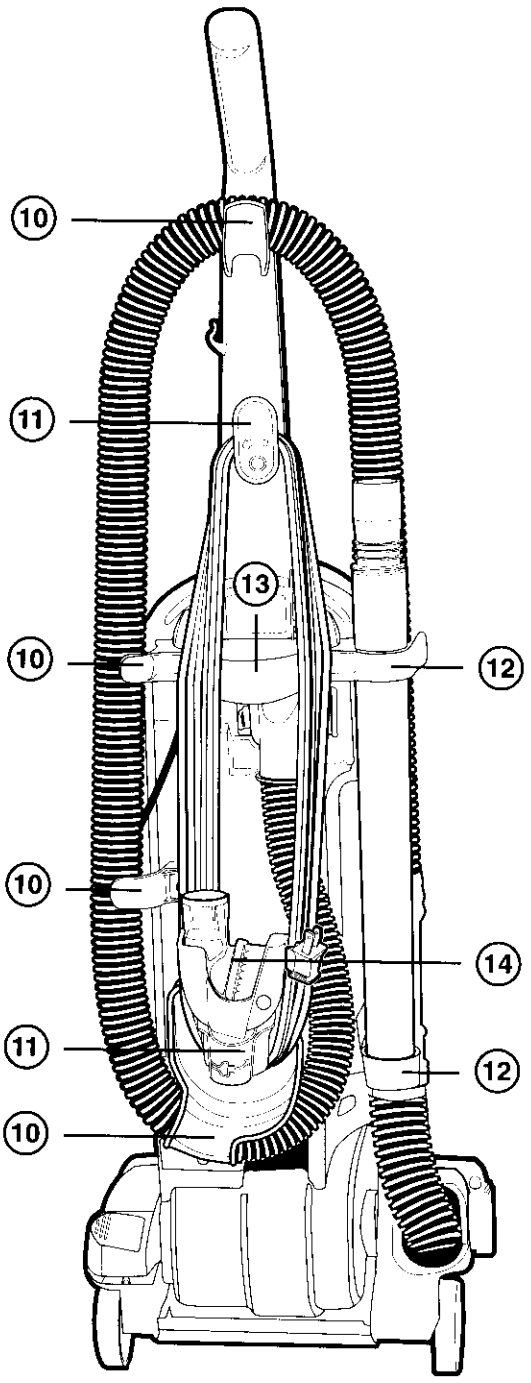

(10) **Hose Retainers (4).** Place hose in retainers to store hose on unit.

(11) **Electrical Cord Hooks (2).** Wrap electrical cord around them to store electrical cord on unit. The upper cord hook rotates for quick cord release.

(12) **Nested Wand Storage.** The crevice wand stores inside the larger wand.

(13) **Carrying Handle.** Use this handle to carry unit from one place to another.

(14) **Dusting/Upholstery Brush Storage.** Store the dusting brush on back of cleaner.

NOTE: WHEN UNIT IS RUNNING, DO NOT ATTEMPT TO REMOVE ANY OBJECT WHICH PREVENTS THE BRUSH ROLL FROM TURNING.

First, turn off unit, unplug from the electrical socket, then remove object from brush roll area. Ex: sock, rug, etc.

Thermal Cut Off

This cleaner has a special thermostat that protects the cleaner in case of motor overheating. If the cleaner suddenly turns off, follow this procedure:

1. Push rocker switch to off (O) position.
2. Unplug the cleaner.
3. Check for source of overheating problem (i.e. full dust cup, blocked hose, or clogged filter).
4. If a full dust cup, blocked hose or clogged filter is found, empty the cup, clear the hose or replace or clean the filters.
5. Wait at least 30 minutes before attempting to reuse the cleaner.
6. After 30 minute cool down period, plug the cleaner in and push the rocker switch to the on (I) position. The cleaner should turn on.
7. If the cleaner still does not operate, call Electrolux on 08706 055055 for a Service Centre location close to you.

Helpful Information:

Listen to your cleaner. If you notice a change in the sound of the motor or a change in performance, it could simply indicate a common usage or maintenance issue. Such as, a need to raise or lower the carpet height adjustment, possible blockage in hose or brush roll area, or a broken or loose brush roll belt. These are all easy to fix and the instructions are included in this owner's guide. Becoming familiar with the information in this guide will help you to get the best possible performance from your new cleaner for many years to come.

CAUTION: Assemble the cleaner before using.

CAUTION: Moving parts, make sure on/off switch is in off (0) position before plugging in.

NOTE: Features may vary by model yet all parts assemble the same.

Attach Handle

CAUTION: Do not catch cord under handle.

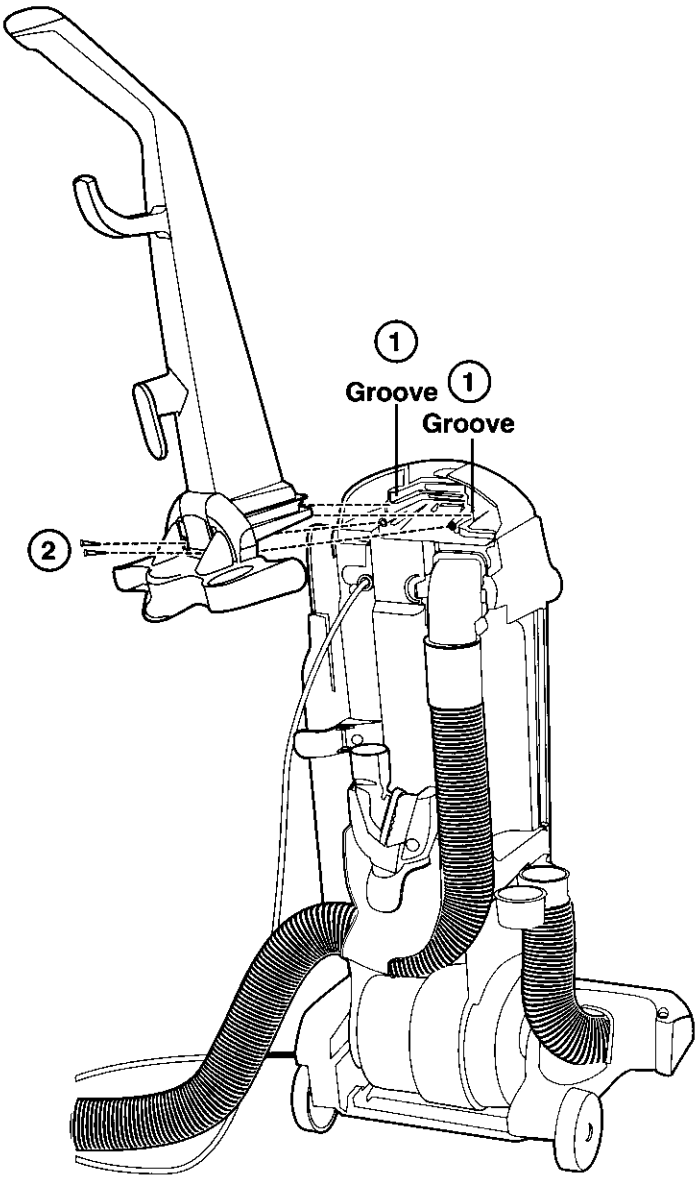

1. From rear of cleaner, align handle with groove and slide onto cleaner. If necessary, use thumb and finger pressure to slide handle into position.

2. Attach handle with two 1 inch screws provided in the assembly packet. Use a Phillips® head screwdriver.

NOTE: Hand tighten with screwdriver to be sure both screws are firmly seated.

Attach Hose

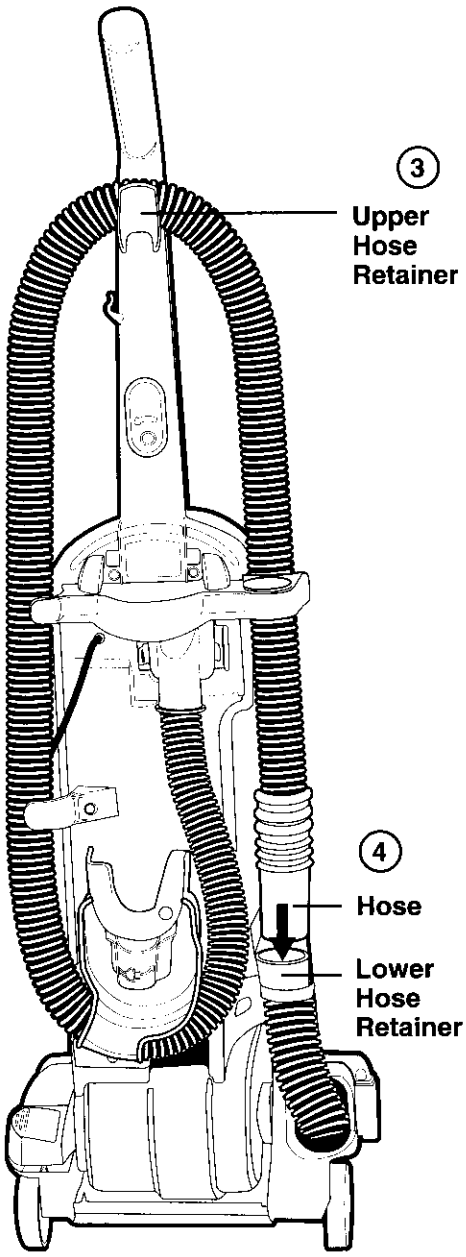

3. Pick up hose and lay across upper hose retainer.

4. Push the end of the hose in the lower hose retainer to secure.

Store Hose and Accessories

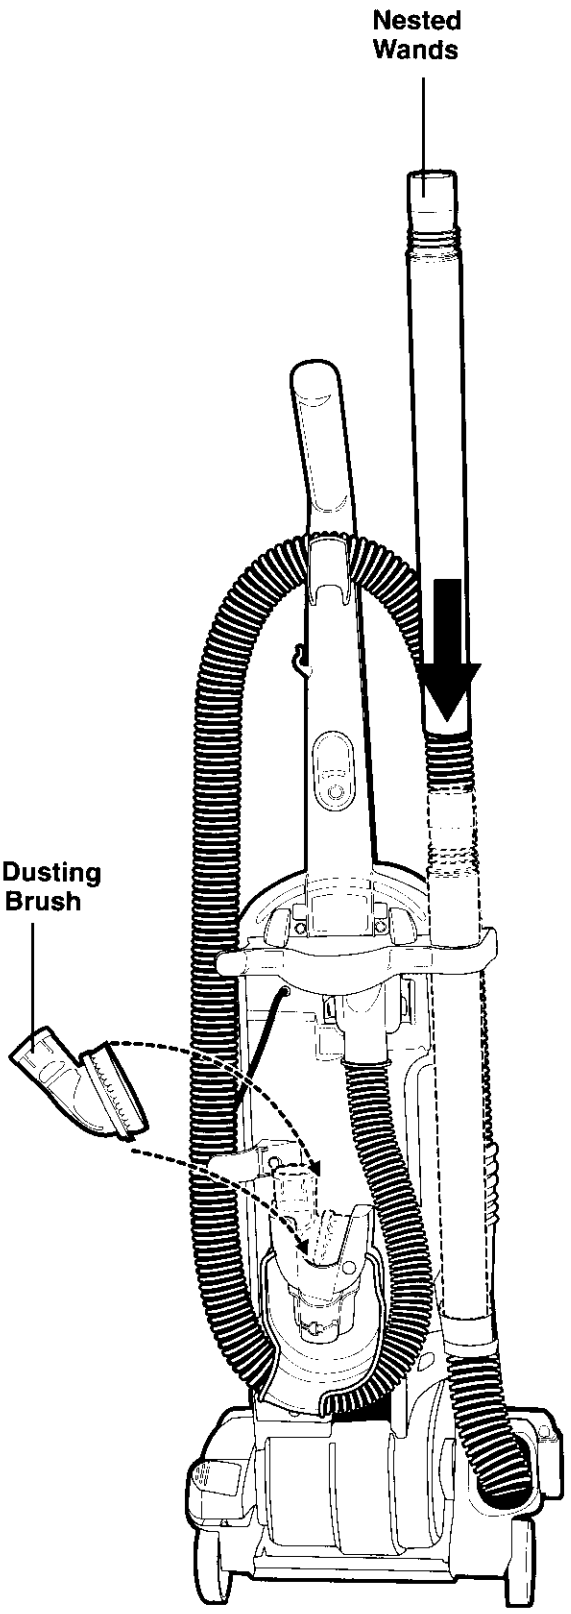

Store Electrical Cord

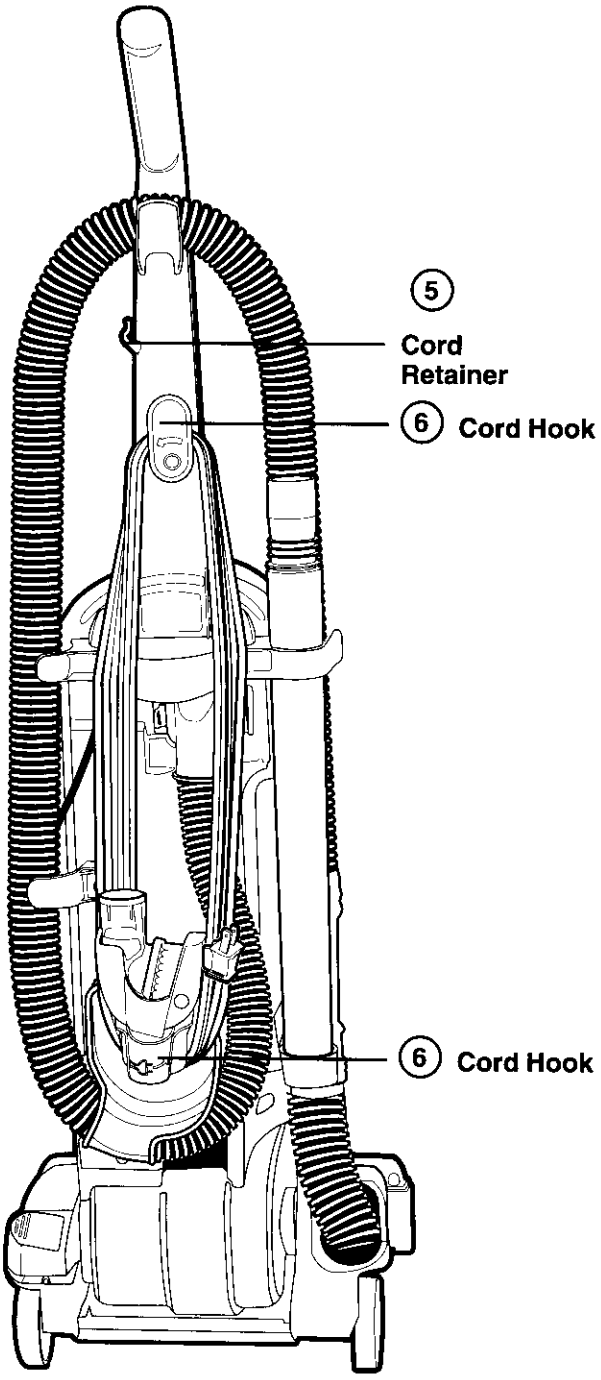

(5) You will find your cord retainer on the handle above the upper cord hook. Firmly push the electrical cord down into the cord retainer. This will place the cord out of the way the next time you vacuum.

(6) Next wind the cord around the two cord hooks on the back side of cleaner.

ON/OFF Switch. International symbol **I** means On, International symbol **O** means Off.

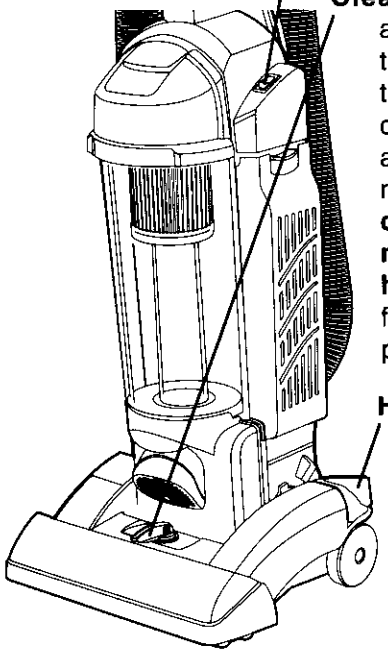

Cleaner Height Setting. An adjustment that raises or lowers the cleaner base to match the type of floor surface. With the cleaner cord unplugged, set the adjustment to lowest setting for maximum carpet cleaning. **If the cleaner is difficult to push, move adjustment to next highest setting until cleaner is comfortable to push.** The brush roll must reach the carpet for effective cleaning. For ease in moving the adjustment knob, place handle in operating position and tilt cleaner back to remove weight from front wheels.

WARNING: Avoid injury. Keep loose clothing, hair, fingers, and all other parts of body away from any moving part (such as the revolving brush). Turn off the switch and unplug the cleaner before changing the cleaner height setting.

Handle Release. Step on handle release to pull handle back to a comfortable operating position. To lower handle completely to the floor, depress handle release a second time.

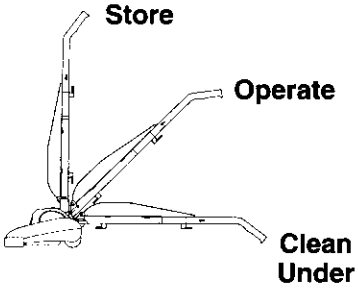

Helpful Information:

Before cleaning under low furniture, check area first for objects that might harm the unit or block the vacuum hose.

NOTE: While using accessories, do not place cleaner on furniture or steps as the brush roll may cause damage. Place cleaner on floor with the handle in storage position.

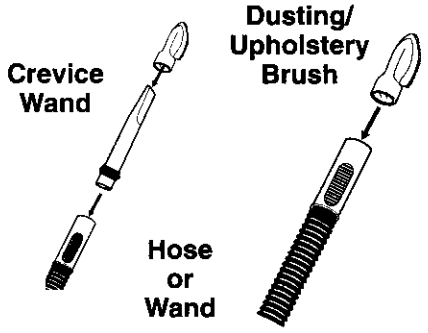

1. To use accessories remove hose from rear of cleaner by lifting up and twisting.
2. Place desired accessory onto end of hose or wand.

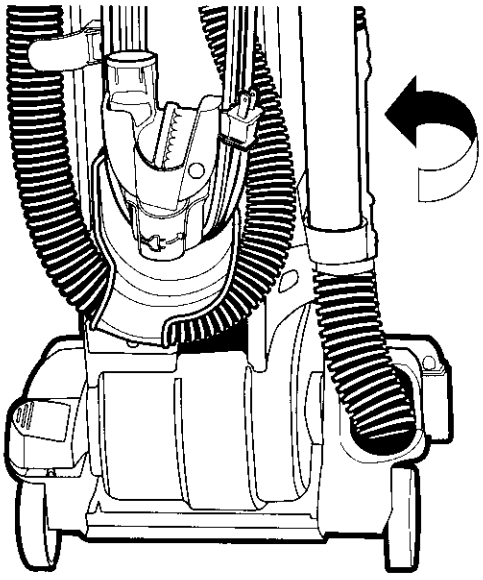

Dusting/Upholstery Brush is for furniture, blinds, books, lamp shades, shelves, curtains, draperies, cushions and fabrics.

Crevice Wand cleans corners, stairs, baseboards, and between cushions.

Nested extension wands to add reach.



- Grasp both wands near ridges.

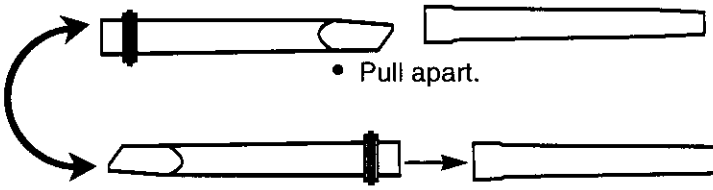

- Pull apart.
- Turn ridge end to center.
- Push wands together.

The instructions in this booklet serve as a guide to routine maintenance. To avoid unnecessary service calls, check the dust cup, filters, belt, and brush roll often. We suggest emptying the dust cup after every use.

NOTE: **When vacuuming carpet fresheners or cleaners, powder, plaster dust, or similar fine substances, the dust cup and filters will require more frequent maintenance.**

NOTE: **Turn off the switch and unplug the electrical cord before changing the filter. Never operate the vacuum cleaner without the dust cup or filter assembly in place.**

Emptying the Dust Cup:

(1) Remove dust cup by pulling latch upward and pivoting dust cup out and away from cleaner.

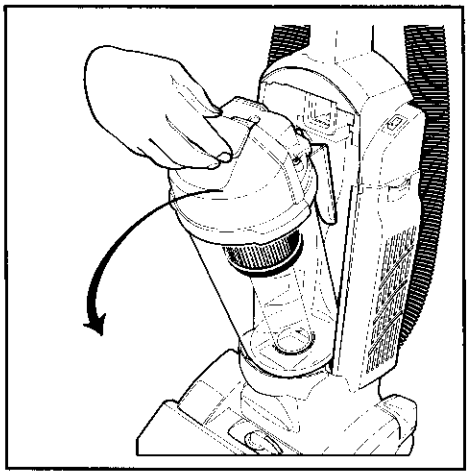

(2) Grasp dust cup lid and twist anticlockwise to remove.

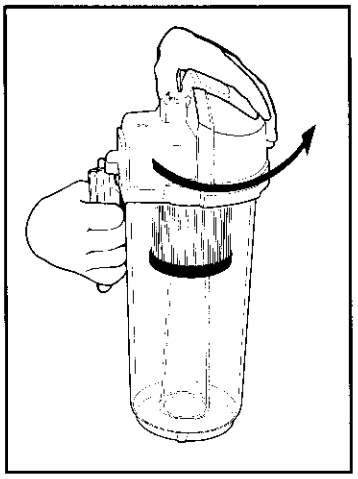

(3) Lift filter up and out of dust cup with a twisting motion.

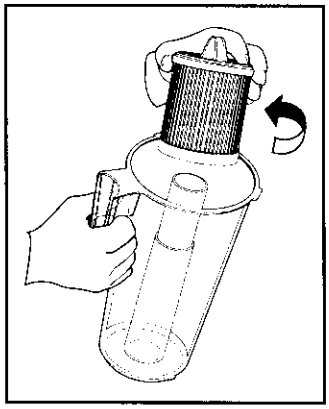

(4) Dump debris in a waste container.

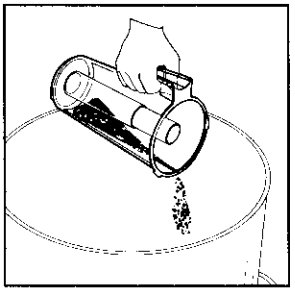

Reinstalling the Dust Cup:

(1) Replace filter onto centre tube in dust cup applying gentle pressure.

(2) Line up tabs on dust cup with openings on lid, rotate lid clockwise while applying pressure to secure. The lock symbol (🔒) on lid will be centered over dust cup handle when properly assembled.

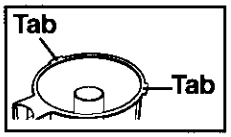

(3) To replace dust cup, position dust cup with handle facing inside the dust cup compartment; place bottom of dust cup in bottom of compartment and rotate upward, pushing dust cup against cleaner until it locks into place.

(4) Dust cup will not properly seat if the filter is not present.

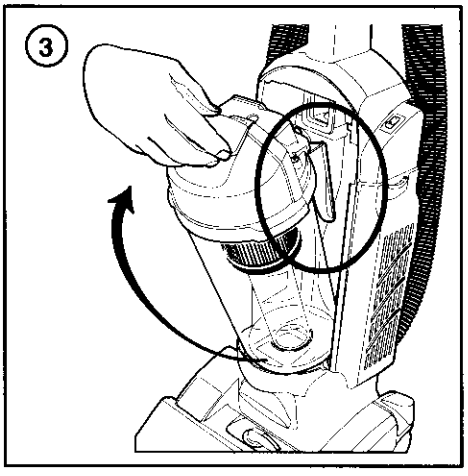

Instructions to Clean or Change Dust Cup Filter, Code EF83

Check and clean the dust cup filter frequently to maintain good performance; at least once every month.

Remove dust cup by pulling latch upward and pivoting dust cup out and away from cleaner.

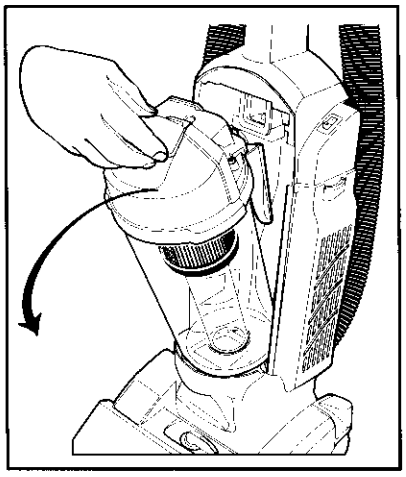

Grasp dust cup lid and twist anticlockwise to remove.

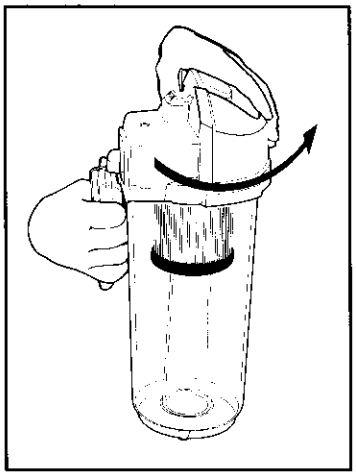

Lift filter up and out of dust cup with a twisting motion. Clean or replace with a new filter.

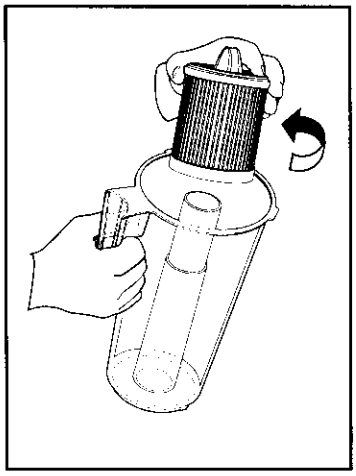

To clean the Filter, Dust Cup and Dust Cup Lid:

1. To remove debris, tap filter against waste container and/or brush with dusting brush accessory tool. You may also vacuum the filter using a different cleaner.

2. If filter needs further cleaning, wash in warm water using a mild detergent. To clean between filter pleats, fan open under running water.

3. If dust cup needs cleaning, wash in warm water using a mild detergent. **Do not submerge dust cup lid, wipe only with a damp cloth.**

4. **When all parts are completely dry,** replace filter in dust cup and replace lid.

NOTE: These parts are <u>not</u> dishwasher safe.

NOTE: Your dust cup filter may need to be replaced if cleaning it does not restore cleaning performance.

NOTE: Dust cup will not seat unless filter is in place.

Use GENUINE Electrolux replacement dust cup filter, Code EF83.

Pre-Motor Filter

Check the pre-motor filter each time the dust cup is emptied. Clean or replace as needed.

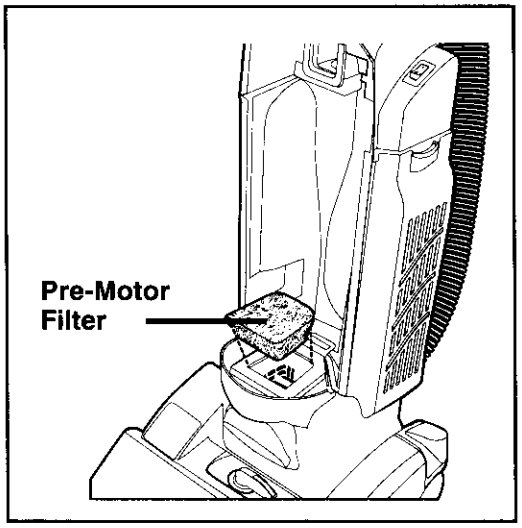

To Remove Pre-Motor Filter

1. Lift up on dust cup lid and remove dust cup from cleaner.
2. Locate the pre-motor filter in the bottom of the dust cup compartment. Lift up and out of the filter cavity.
3. Clean or replace pre-motor filter. Replace dust cup in cleaner, making sure dust cup is secure.

Models equipped with Filter Pad

Wash the filter pad frequently to maintain best performance; at least once every month. Replace as needed.

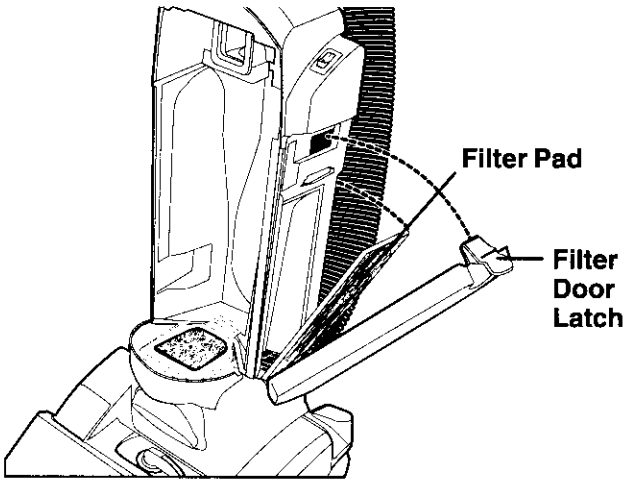

To remove Filter Pad from *filter door*

1. Push down on filter door latch and pull door away from cleaner.
2. Lift filter pad up and out of filter door. Dispose of old filter pad.

To replace Filter Pad into *filter door*

1. Place new filter pad in filter door.
2. Replace filter door by placing tabs of door into slots on cleaner. Rotate door up and against cleaner until it locks into place.

These filter pads are interchangeable.
Filter Pad Replacement Options:
Micron, Code EF84, includes pre-motor filter.
HEPA, Code EF85, includes pre-motor filter.

Use GENUINE Electrolux replacement filter pads.

To Clean Pre-Motor Filter and Filter Pad

1. Remove the filter from the cleaner.
2. Shake filter to remove excess dust. If necessary, the filter can be cleaned by vacuuming with another cleaner or washing with mild detergent.
3. Reinstall filter after completely dry.

Brush Roll

The brush roll turns as it sweeps and combs the carpet pile. Remove hair and threads from the brush roll so it continues brushing the carpet. To maintain the most efficient cleaning, the bristles must touch the carpet. To test the bristle length, hold a ruler against the underneath side of the cleaner. If the bristles no longer touch the ruler, replace the brush roll.

Brush Roll Belt, Code ZE097

The brush roll belt turns the brush roll to agitate, sweep, and comb the carpet pile. Check the belt regularly to be sure it is in good condition. Replace the belt if it stretches, cracks or loses tension. Cut away any hair or threads wound around the brush roll or the belt pulley because the buildup could cause the belt to rotate unevenly.

How To Replace Brush Roll Belt

NOTE: Turn off the switch and unplug the electrical cord before replacing belt. Belt pulleys can become hot during normal use. To prevent injury, avoid touching the motor shaft when changing the belt.

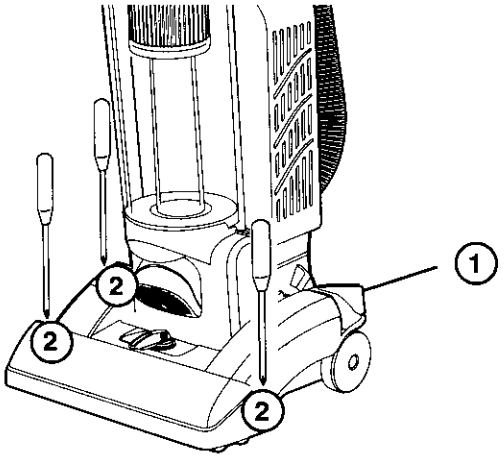

1. Lower handle to floor to change belt.
2. Remove three screws indicated by screwdrivers in above illustration. Lift hood to remove.

NOTE: The carpet height adjustment has to be in the lowest or highest position to remove or reinstall the hood.

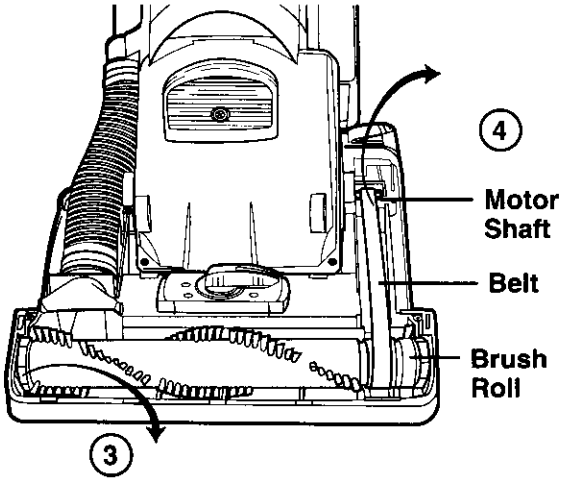

3. Lift left end of brush roll.
4. Remove and discard belt.

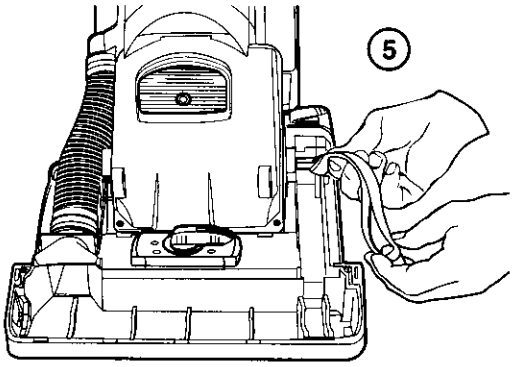

5. Place new belt around motor shaft.

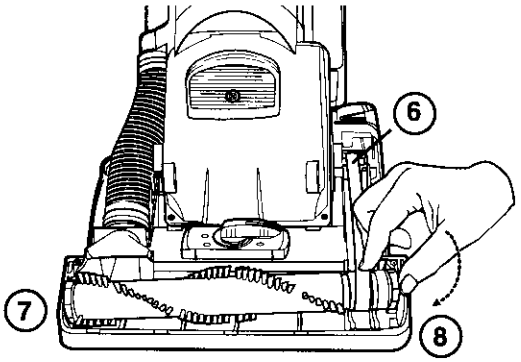

6. Place belt around brush roll pulley.
7. Align left end cap with base. Push end cap securely into place.
8. Pull right side of brush roll to stretch belt. Secure right end cap into base.

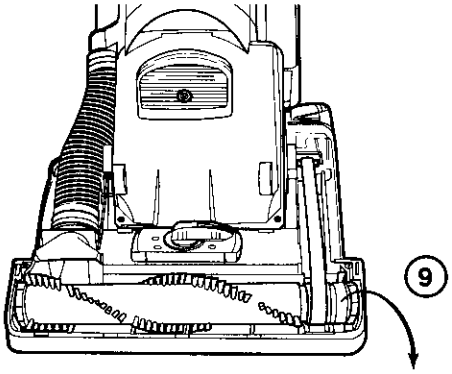

IMPORTANT

9. Rotate brush roll by hand two full rotations to properly position belt.

10. Place hood back on cleaner. Make sure hood front is behind furniture guard. Replace three screws.
11. Tighten screws.

Use GENUINE Electrolux replacement belt, Code ZE097.

To Clear Blockages in Hose

NOTE: Turn off the switch and unplug the electrical cord before clearing hose.

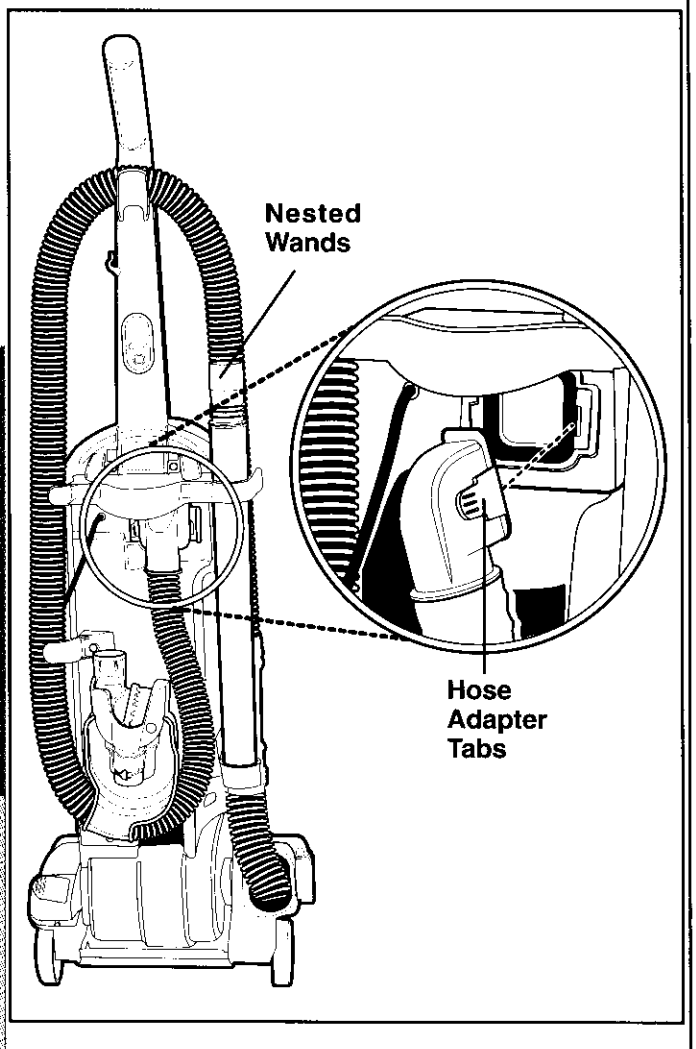

1. Locate upper hose adapter on the back of the cleaner.
2. Remove nested wands from back of cleaner for easy access to hose adapter tabs.
3. Press hose adapter tabs together and pull hose adapter away from cleaner. The hose adapter will unscrew off hose for easy access to debris if necessary.
4. Check for blockages at cleaner opening and in hose. **If no blockage is found, continue to step 5.** If blockage is found, clear and continue to step 11.

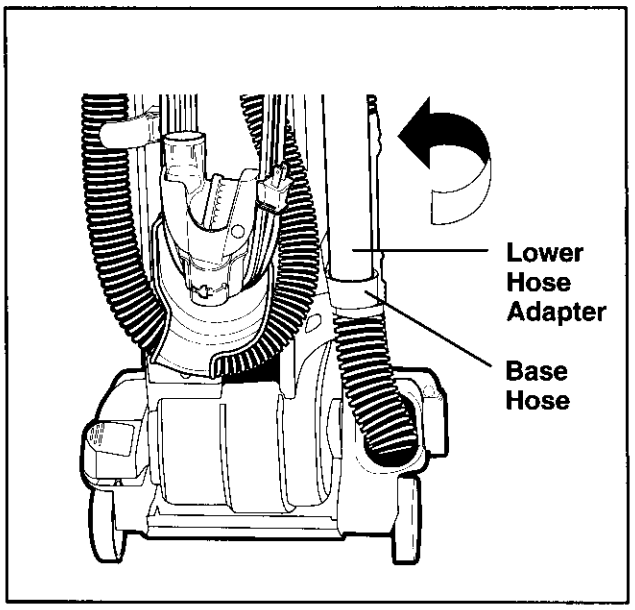

5. Locate lower hose adapter on the back of the cleaner.
6. Remove lower hose adapter from rear of cleaner by lifting up and twisting.
7. Check for blockages in the hose and base hose. Flexing the hose may help loosen any blockage. **If no blockage is found, continue to step 8.** If blockage is found, clear and continue to step 11.

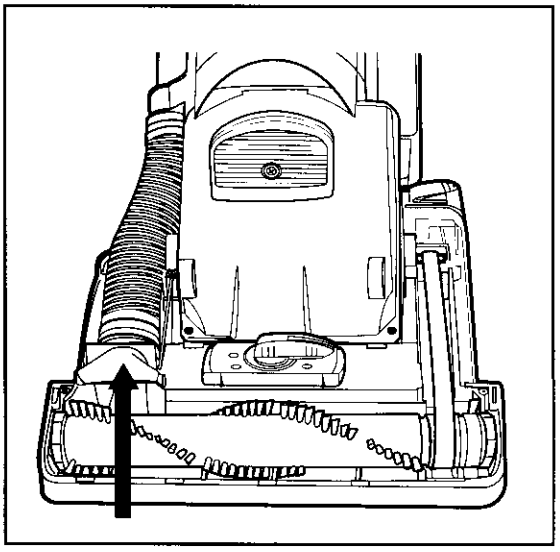

8. Remove hood from cleaner and check for a blockage in the brush roll area. Make sure the hose inlet is clear.
9. After the blockage is found and cleared, replace the hood on the cleaner.
10. Place lower hose adapter back into the base hose.
11. Install the upper hose adapter onto the back of the cleaner, line it up with the cleaner opening and push it against the cleaner until **both** tabs lock into place.

NOTE: Turn off the switch and unplug the electrical cord before servicing.

PROBLEM	CAUSE	SOLUTION
Motor will not start.	☑ Electric Plug	☐ Push plug securely into outlet. ☐ Try another outlet. ☐ Check circuit breaker.
Motor suddenly stops.	☑ Thermal Cut Off	☐ Page 6.
Does not clean the carpet or floor.	☑ Filters	☐ Clean or replace the filters. **Hint:** If picking up fine dust, the filters may not look dirty but a fine substance tends to reduce suction when it blocks the airflow through the filter(s).
	☑ Dust Cup	☐ Be sure the dust cup is properly seated into the cleaner body. Page 10. ☐ Empty dust cup. Page 10.
	☑ Hose	☐ Be sure hose adapter is secure on back of cleaner. Page 14. ☐ Remove any blockages from the hose that restrict the airflow. Page 14. ☐ Check base hose and long hose. Page 14.
	☑ Belt	☐ Replace a broken, cut, loose or out of shape belt. Page 13.
	☑ Brush Roll	☐ Clean hair and thread from bristles and end cap area. ☐ Replace brush roll if bristles are worn. Page 13.
No suction at the end of hose.	☑ Hose Adapter	☐ Be sure hose adapter is secure. Page 14.
	☑ Filters	☐ Clean or replace the filters. **Hint:** If picking up fine dust, the filters may not look dirty, but a fine substance tends to reduce suction when it blocks the airflow through the filters.
	☑ Hose	☐ Remove any clogs from the hose that restrict the airflow. Check base hose and long hose. Page 14.
	☑ Dust Cup	☐ Empty dust cup.
Noise from the brush roll area.	☑ Brush Roll	☐ Remove hood and clean debris or items from the brush roll area.
	☑ Belt	☐ Replace a broken, cut, loose or out of shape belt. Page 13.
Cleaner is hard to push.	☑ Cleaner Height Setting	☐ Put handle in operating position. Tilt the cleaner back to raise the front wheels off floor. Then turn the knob to a higher setting.
	☑ Belt	☐ Replace a broken, cut, loose or out of shape belt. Page 13.
Cleaner height knob will not turn.	☑ Cleaner Height Setting	☐ **Hint:** Put handle in operating position. Tilt the cleaner back to raise the front wheels off floor. Then turn the knob.
Dust cup will not go into cleaner.	☑ Dust Cup Lid Assembled Properly	☐ Filter has to be installed in dust cup or dust cup will not go into cleaner.
Hood will not come off.	☑ Cleaner Height Setting	☐ Hood cannot be removed from cleaner unless the cleaner height setting is in the lowest or highest position.
	☑ Screws	☐ All three screws must be removed from the top of the hood. Page 13.
Missing parts		Call Electrolux Customer Service on 08706 055055.
Questions?		Call Electrolux on 08706 055055. Have the model and serial numbers ready when you call. See rating plate beneath the cleaner.

Questions?
Do Not Return To Store
Call
08706 055055

Accessory Items in This Carton

1 Dusting/Upholstery Brush

1 extra belt

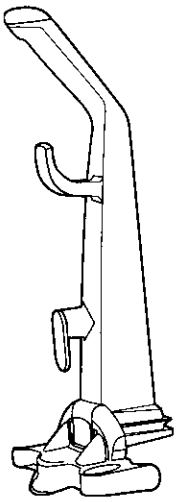

1 vacuum cleaner handle



1 wand, 1 crevice wand

1 hardware package
(2 screws)

Thank you for selecting an Electrolux cleaner.

Don't Forget to Use
Genuine Electrolux Belts

Caution: Damages caused by the use of non-genuine parts are not covered by the Electrolux Guarantee.

40F130491

Part No. 72271 (6/02)

Printed in U.S.A.